


TAGGING GUN OPERATING INSTRUCTIONS



HOW TO USE IT

1. Insert either end of the fastener connecting bar into the feed slot at the top of gun. Push the clip of fasteners into the slot as far as it will go until "click" is heard. Your gun is now ready to use.

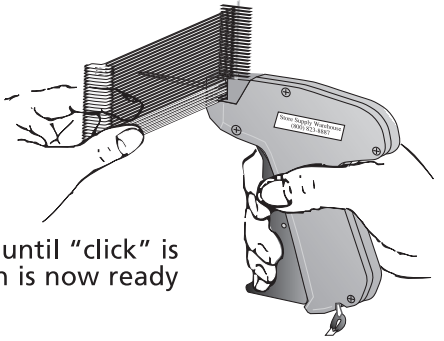


2. Hold gun firmly against merchandise and squeeze the trigger fully.




3. Release trigger completely and withdraw gun. The tag should be securely fastened.



4. To remove fastener clip from gun — push fastener release button on top of gun toward rear of gun. Pull fastener clip straight up to remove from gun.

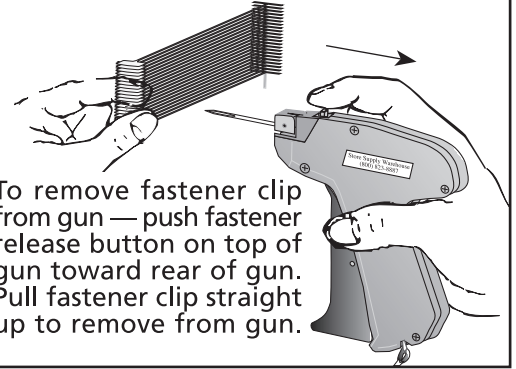


REPLACING NEEDLE

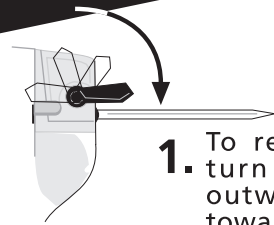


1. To replace needle, turn needle lock outward, pointing toward the needle's point.


2. Insert the new needle with the slot in the needle lined up with the slot in the gun.

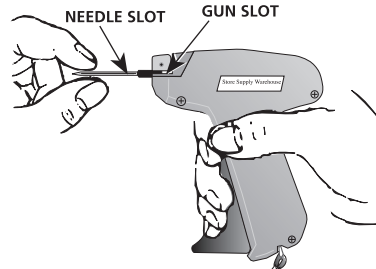

3. Turn needle lock toward the rear of the gun to lock needle in place.

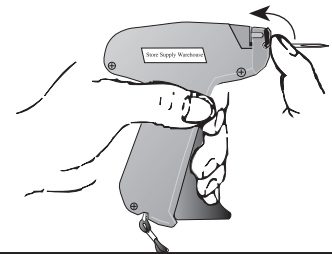

TO CLEAR A FASTENER JAM

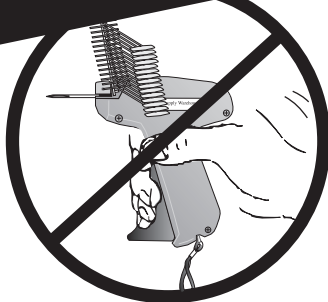

1. If a fastener jams: First release the trigger and remove the needle (as shown above). Then carefully remove the jammed fastener from the gun or needle.



2. If a fastener can't be easily and safely removed from the needle — simply replace the needle with a new one (as shown above).



NEVER CONTINUE TO SQUEEZE THE TRIGGER TO CLEAR A JAM. THIS COULD POSSIBLY CAUSE INJURY OR DAMAGE TO THE GUN.

NEEDLE: For best results we recommend using SSW tagging gun needles.

WARRANTY: Your SSW Tagging Gun is Warranted for 5-Years. If it should fail to perform, for any reason, simply return it to us and we will either repair or replace it.

SAFETY NOTE: Tagging guns have needles which, when exposed, may cause accidental injury.

FOR SAFETY — KEEP NEEDLE GUARD ON WHEN GUN IS NOT IN USE