 
 



# 94-501 SSW 1-LINE LABELER - SET-UP AND OPERATION

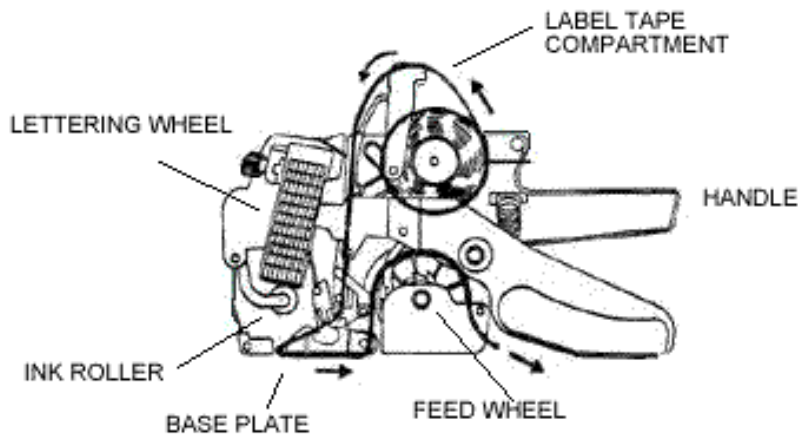


## CHANGING THE INK ROLLER

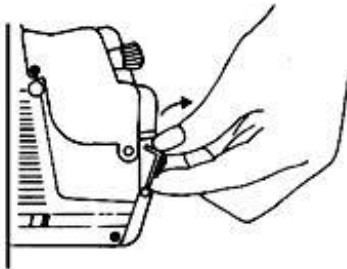

 Press and take out the ink roller case

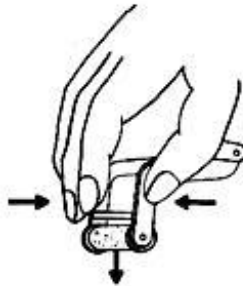


 Squeeze in as indicated to release ink roller.

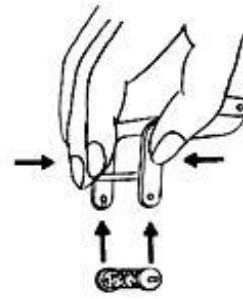

While still squeezing — insert new ink roller. Replace case.


## LOADING AND USING YOUR SSW 1-LINE LABELER

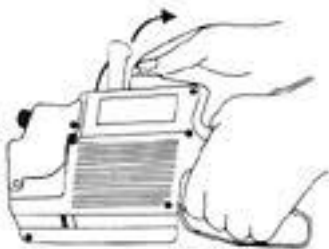 

1. Pull out tab and lift the label compartment in the direction of arrow.



 
2. Insert label roll with tape going over top of guide. Close compartment.

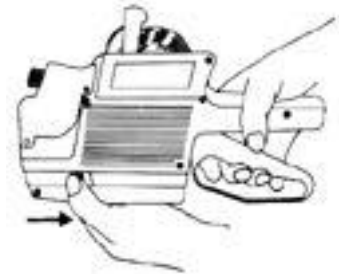


3. Pull back handles to release base plate



 4. Feed labels through labeler allowing an extra 4 inches to extend below base plate.

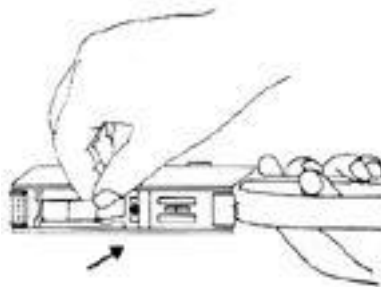


 5. Close base plate and remove labels from backing. Insert end of label tape into slot marked "LABEL" (behind base plate, not the small narrow slot.)

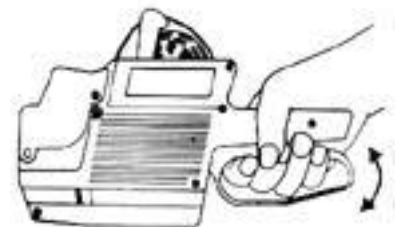

6. Squeeze handle 7-8 times to feed tape around pin-feed wheel and out the back slot.

## USING LABELER

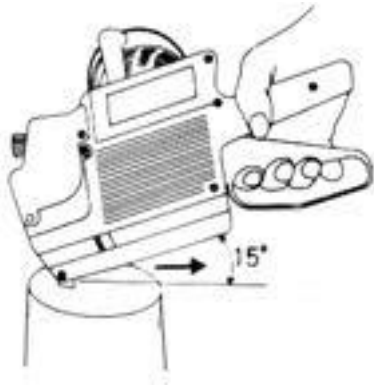 

To affix label, squeeze handle and touch onto merchandise with a rolling motion, lifting handle approx. 15°.


If you have any questions about your SSW labeler or wish to order labels or ink rollers

CALL:

**1-800-823-8887**

 **STORE SUPPLY WAREHOUSE**  
[www.storesupply.com](http://www.storesupply.com)


## SETTING THE PRINT WHEELS

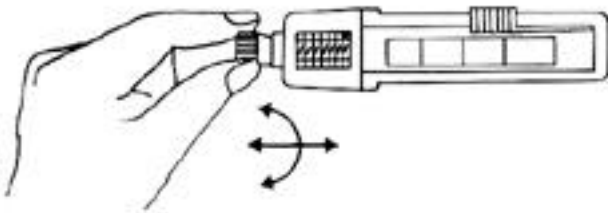

Pull dial shaft outward and rotate each wheel to the desired position.

- When price is set, slide the dial shaft back in.

## ADJUSTING THE PRINTING POSITION

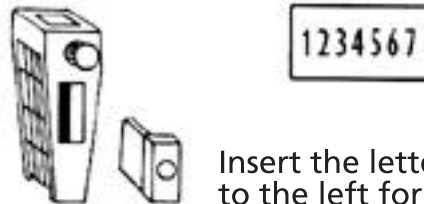 

Insert the letter head fixed key to the left for middle position printing.



Insert the letter head fixed key to the right for lower position printing.

