


ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER

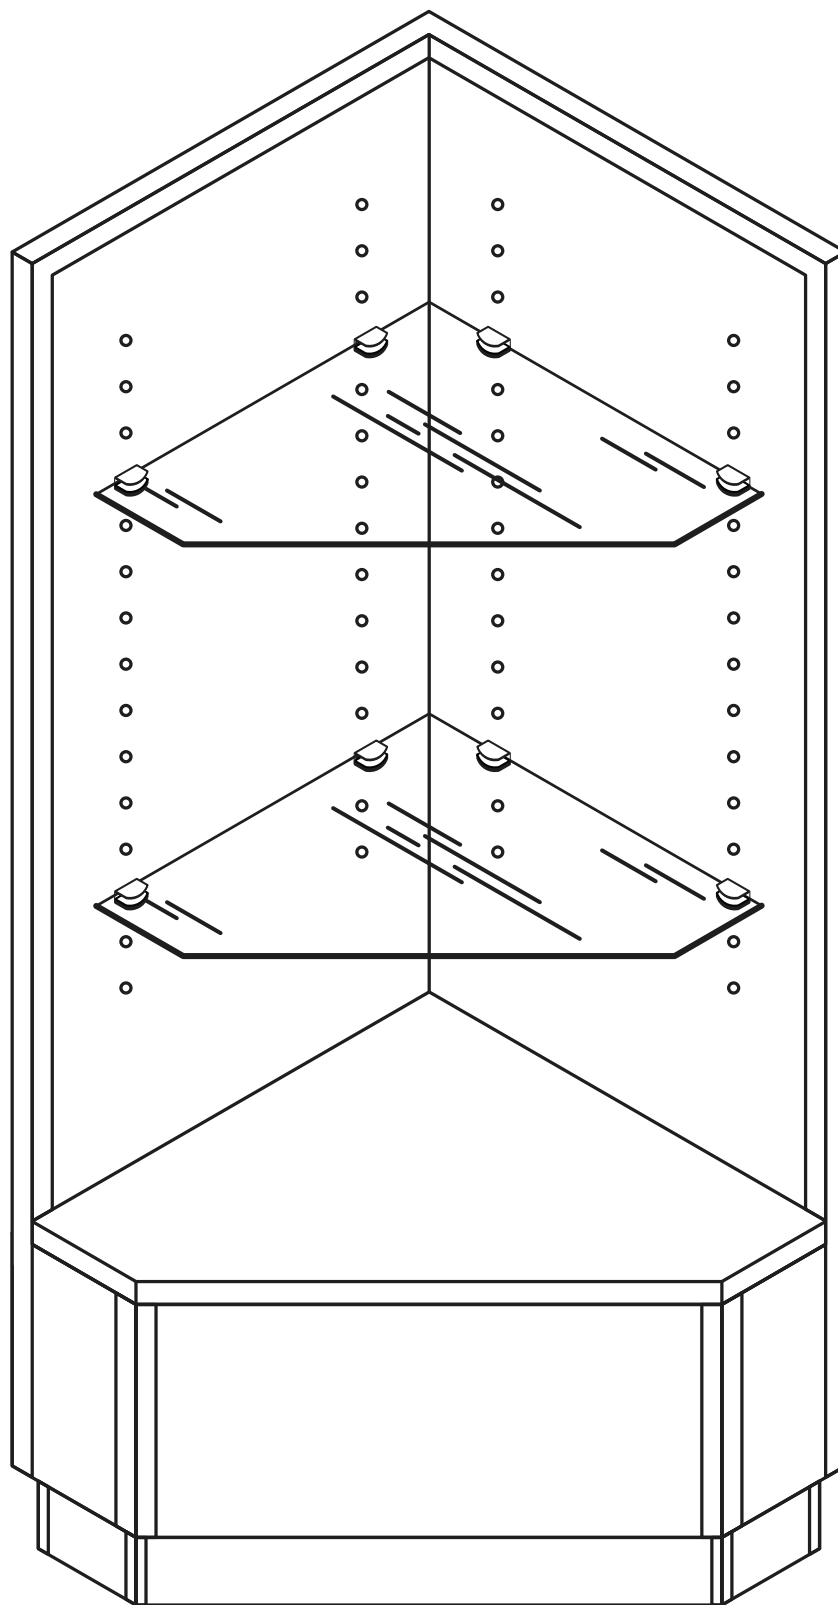

ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER


PARTS IN CARTON:



CAM LOCK PINS
(XX EACH)




CORNER CAP
(3 EACH)

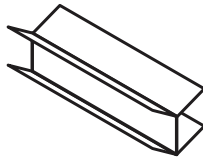


CORNER END
(2 EACH)



#8 PAN HEAD
SCREW
(XX EACH)

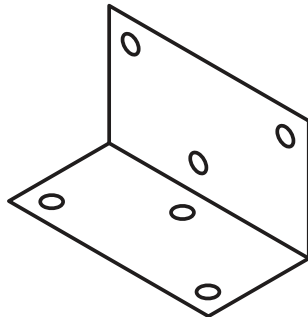

CORNER
REINFORCEMENT
(1 EACH)

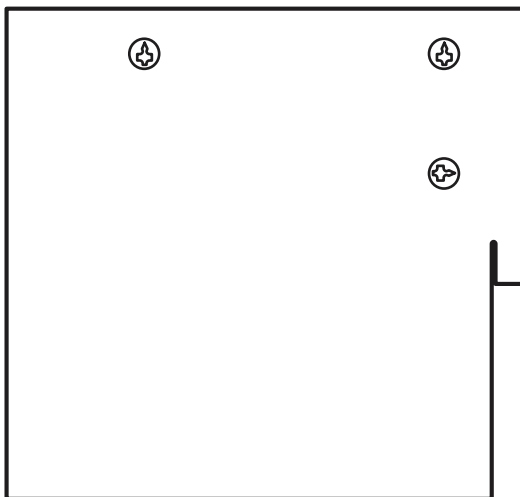


CENTER BASE SUPPORT
(1 EACH)




REAR SIDE KICK PLATE
(1 EACH)




REAR SIDE KICK PLATE
(1 EACH)

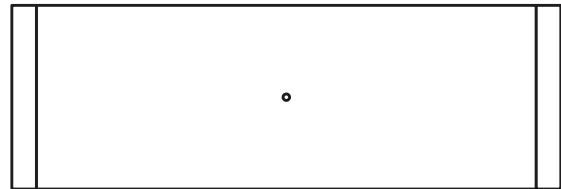

FRONT KICK PLATE
(1 EACH)

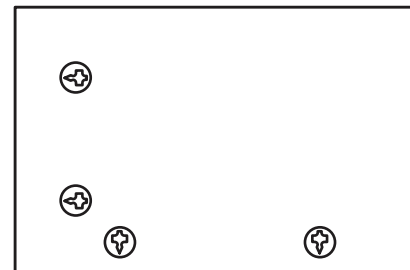

SIDE BASE SUPPORT
(2 EACH)

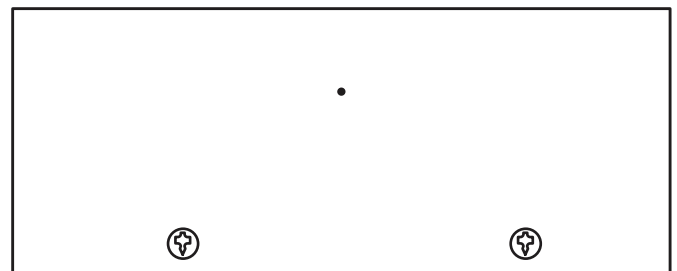


FRONT BASE SUPPORT
(1 EACH)


ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER


PARTS IN CARTON:

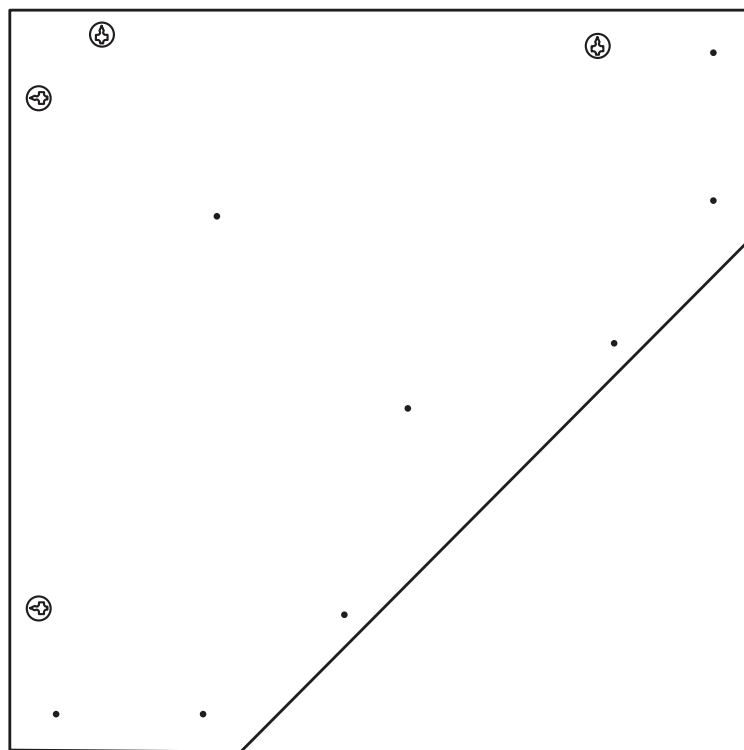

TOP BASE
SUPPORT
(1 EACH)

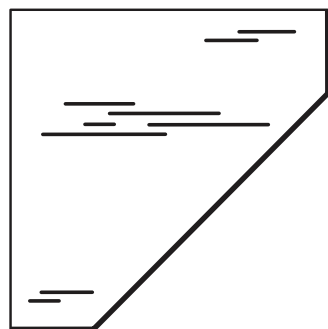


GLASS PANEL
(2 EACH)

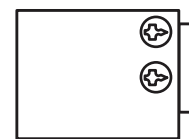

SIDE BASE
SUPPORT
(2 EACH)



SIDE PANEL
CORNER CAP
(1 EACH)

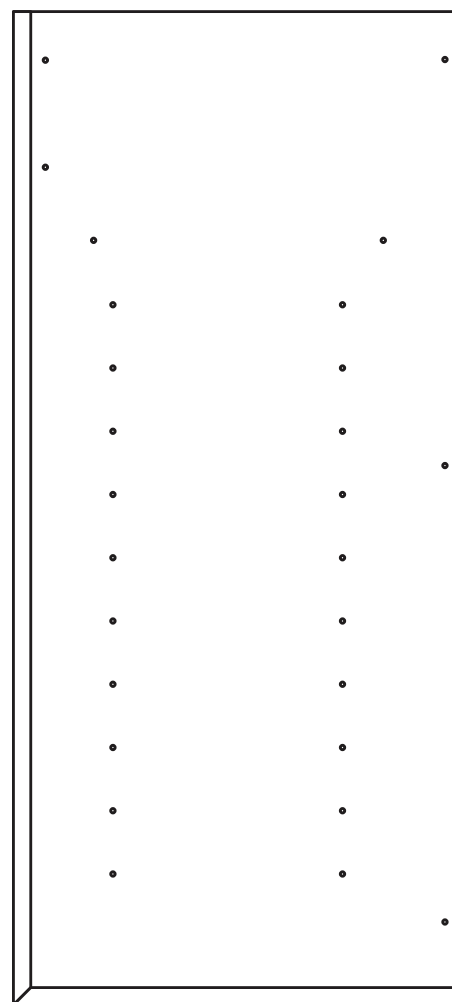

SIDE PANEL
(2 EACH)


YOU WILL NEED TO SUPPLY YOUR OWN DRILL OR SCREWDRIVER & RUBBER Mallet FOR INSTALLATION.

ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER


STEP 1

INSERT CAM LOCK PINS INTO EACH PANEL.
(USING A MANUAL SCREW DRIVER IS BEST, TO
HELP AVOID OVER TIGHTENING.)

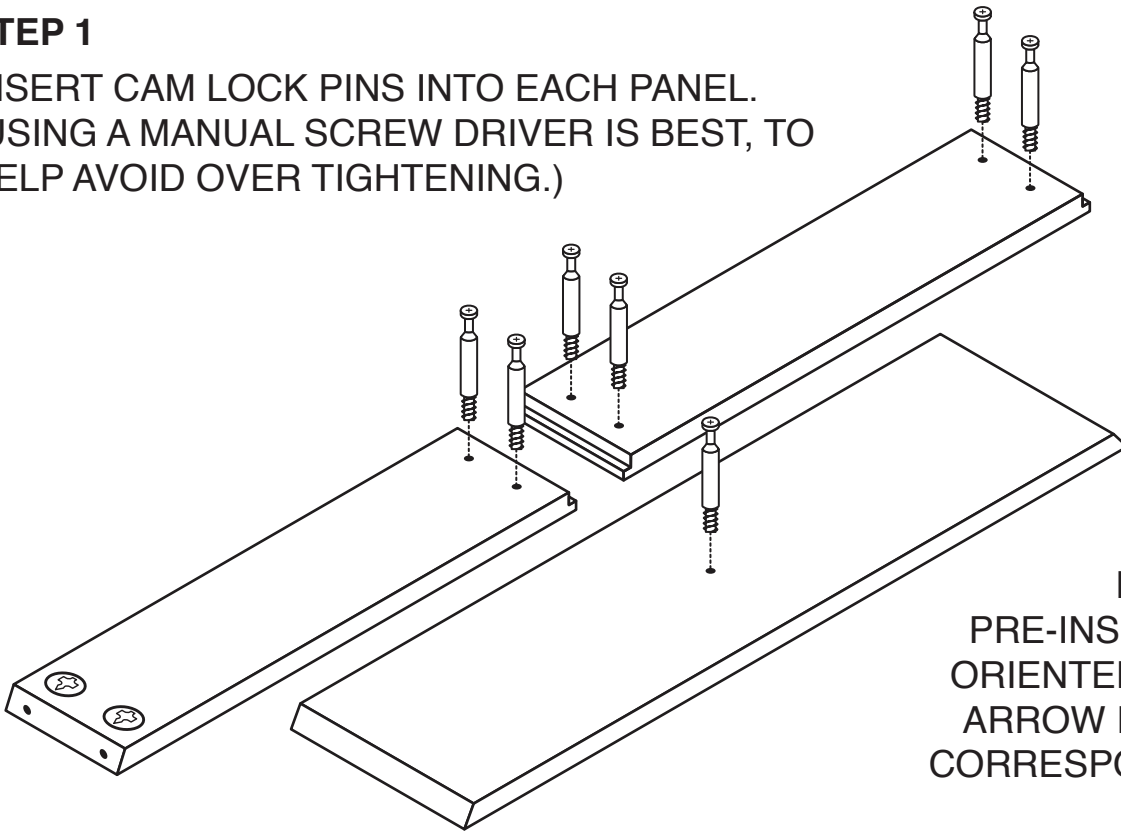


STEP 2

ENSURE EACH
PRE-INSERTED CAM IS
ORIENTED SO THE CAM
ARROW IS FACING THE
CORRESPONDING HOLE.

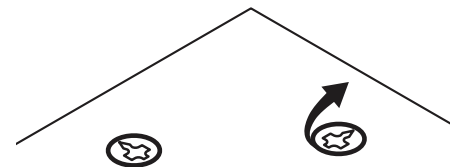

STEP 3

ALIGN THE REAR & SIDE
KICK PLATE PANELS, THEN
SCREW IN THE CORNER
END ATTACHMENT. NEXT
ALIGN ALL REMAINING
PANELS WITH THE
CORRESPONDING CAM
PINS & TIGHTEN CAMS
(SEE FIGURE 1).

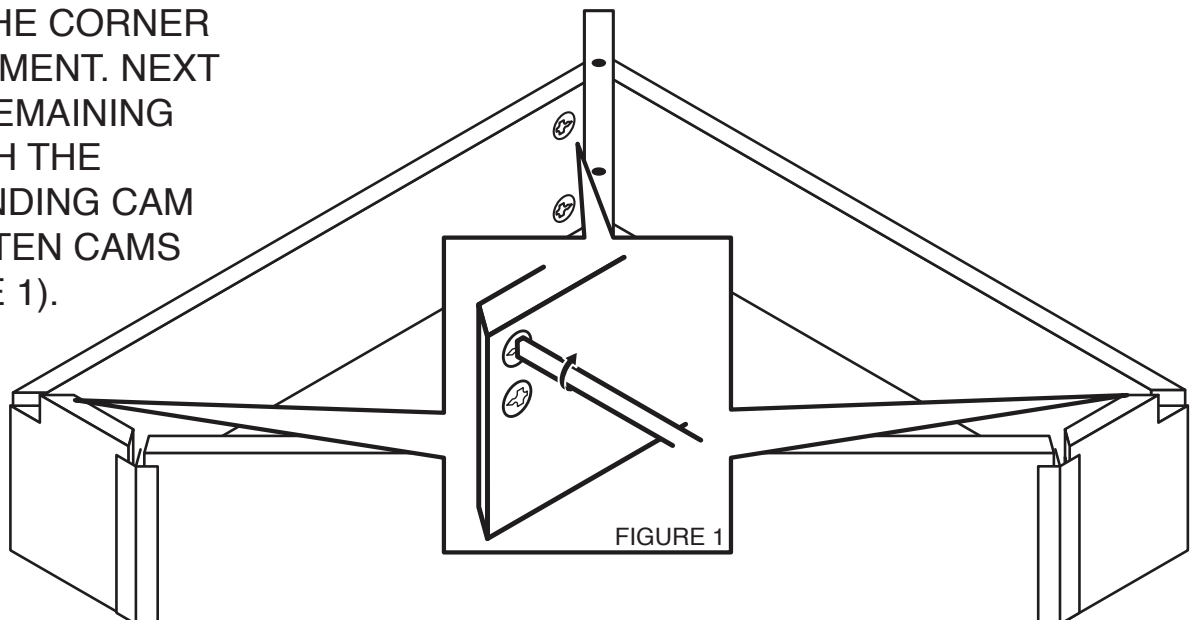


ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER


STEP 4

USING A RUBBER Mallet, INSERT EACH CORNER CAP ONTO THE KICK PLATE CORNERS.

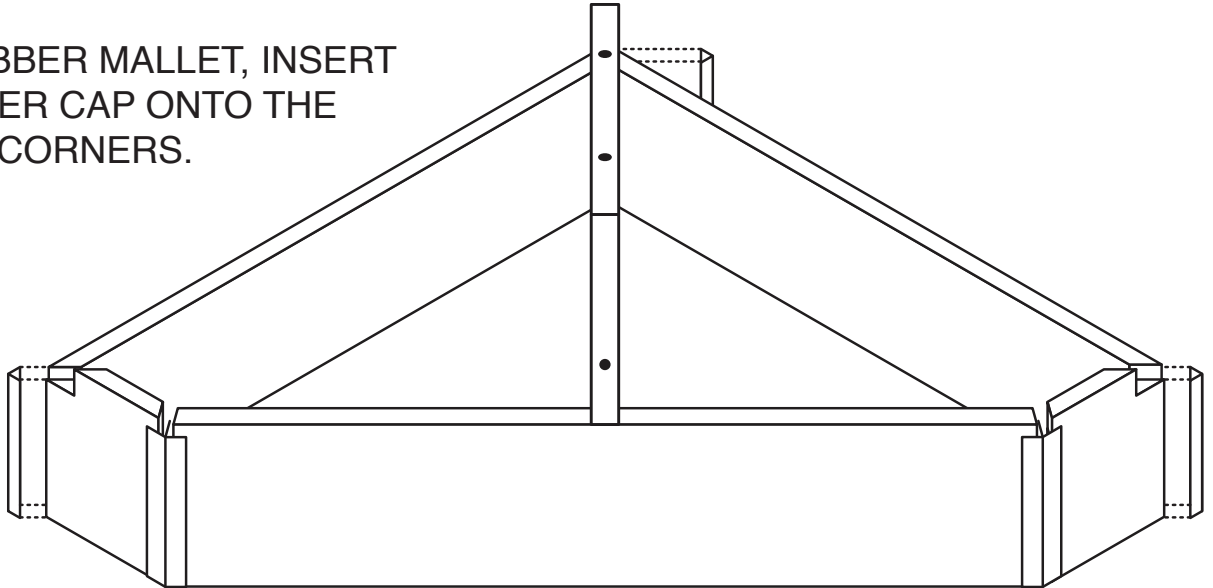


STEP 5

INSERT CAM LOCK PINS INTO EACH PANEL. (USING A MANUAL SCREW DRIVER IS BEST, TO HELP AVOID OVER TIGHTENING.)

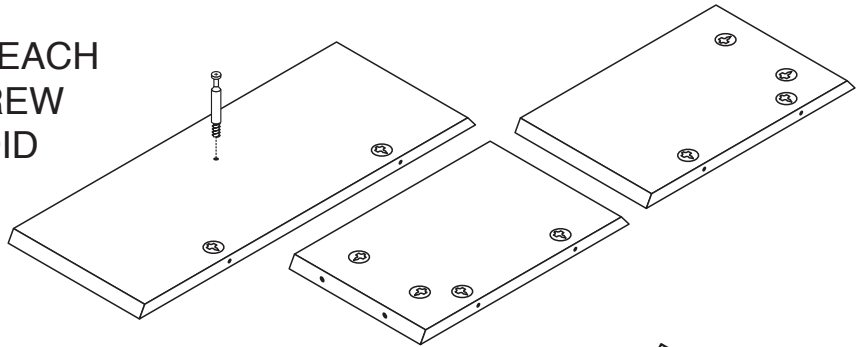

STEP 6

INSERT CAM LOCK PIN INTO PANEL & ENSURE CAM LOCKS ARE FACING THE CORRESPONDING HOLES. ALIGN THE FRONT & SIDE KICK PLATE PANELS, THEN SCREW IN THE CORNER END ATTACHMENT.

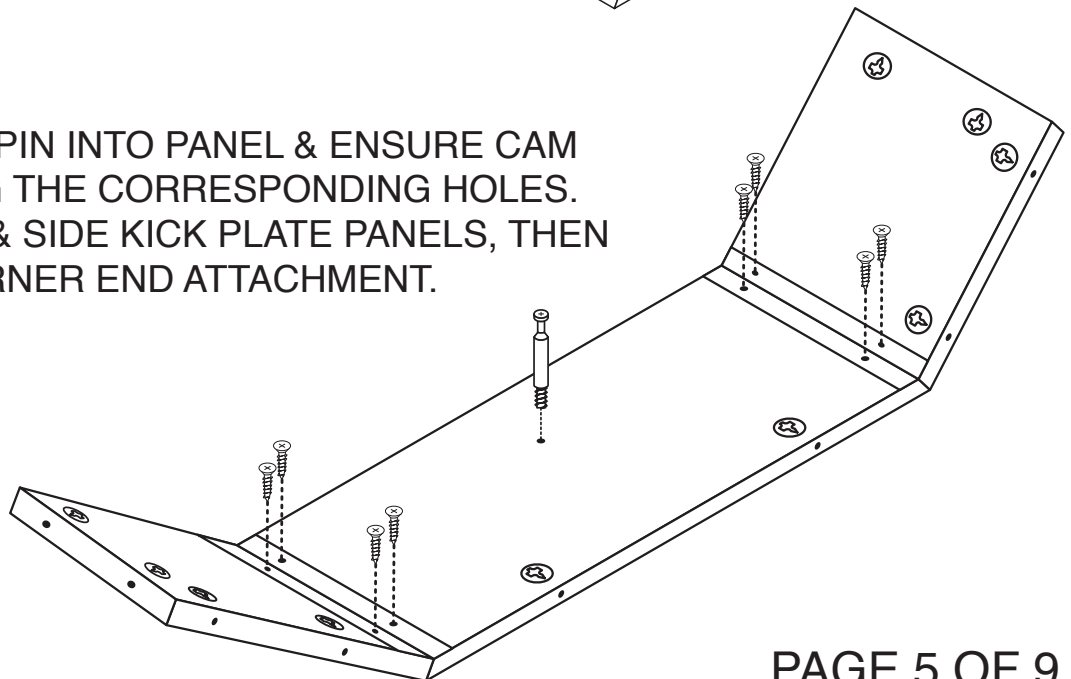


ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER


STEP 7

CAREFULLY INSERT THE CAM PIN OF THE BASE ASSEMBLY INTO THE KICK PLATE ASSEMBLY. (TIGHTEN CAMS)

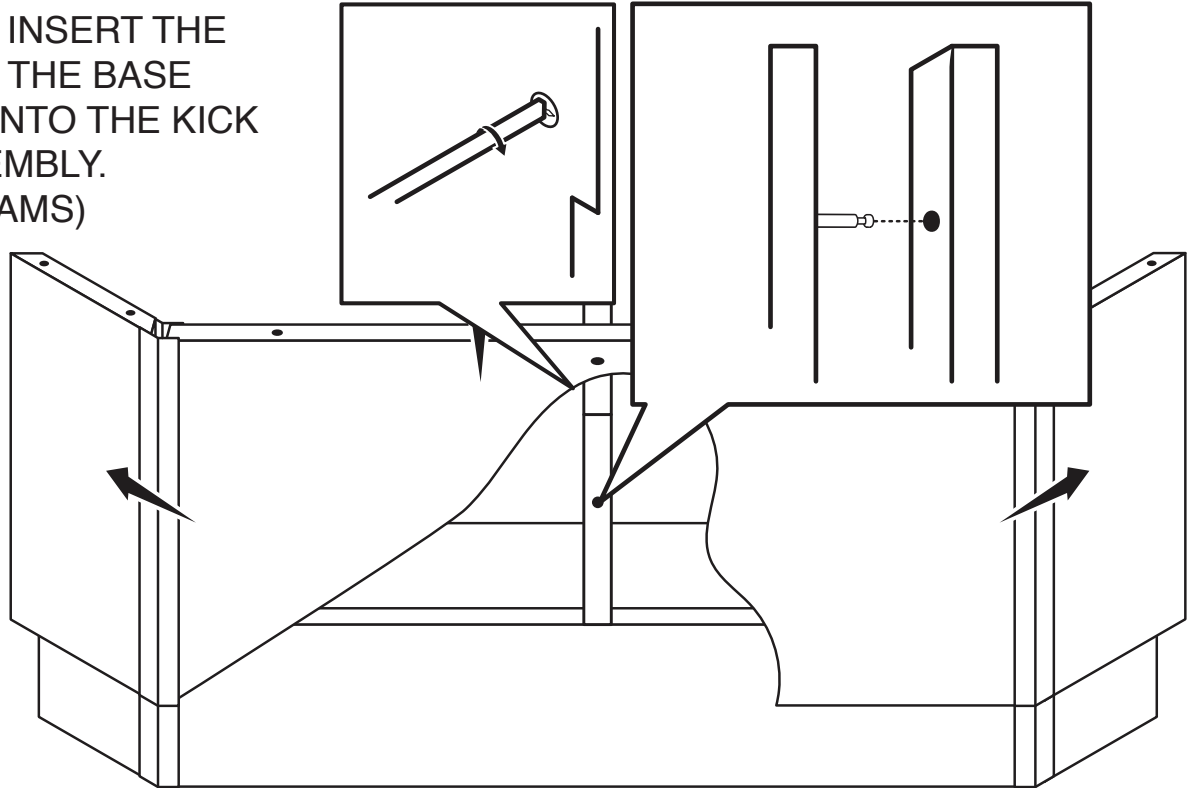


STEP 8

INSERT CAM LOCK PINS INTO THE TOP PANEL. (USING A MANUAL SCREW DRIVER IS BEST, TO HELP AVOID OVER TIGHTENING.)

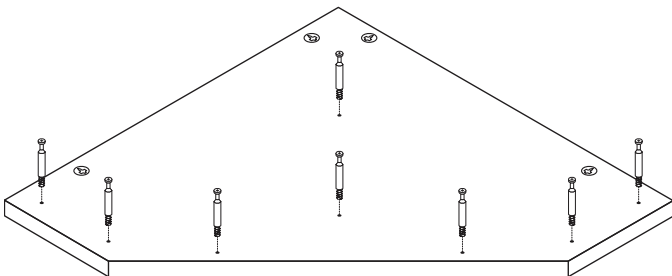

STEP 9

CAREFULLY LOWER THE TOP PANEL ONTO THE BASE ASSEMBLY. (TIGHTEN CAMS)

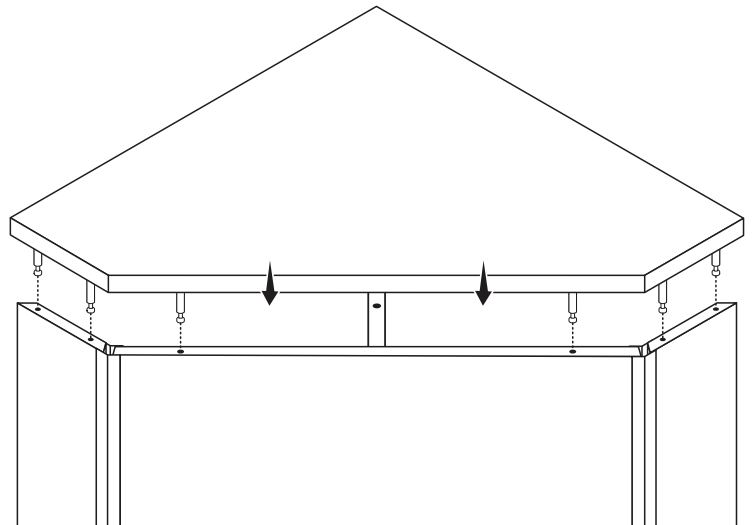


ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER


STEP 10

INSERT CAM LOCK PINS
INTO BOTH SIDE PANELS .
(USING A MANUAL SCREW
DRIVER IS BEST, TO
HELP AVOID OVER
TIGHTENING.)

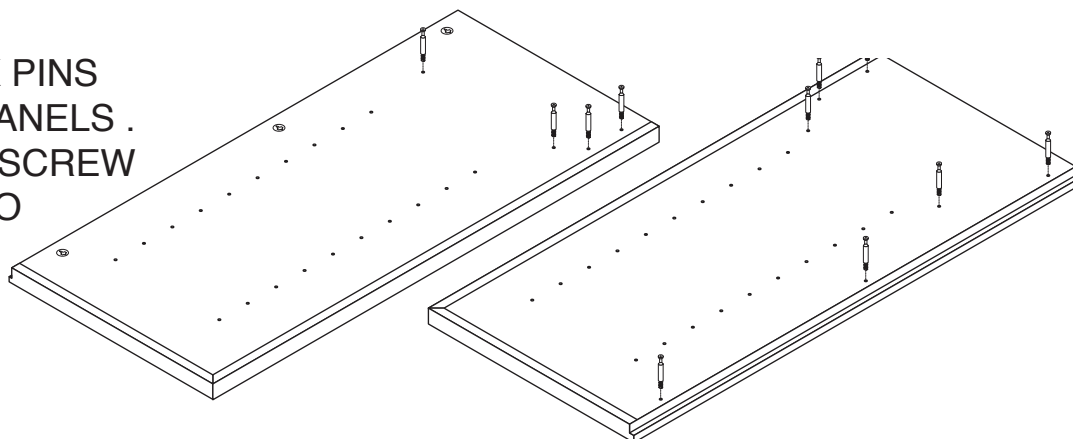

STEP 11

CAREFULLY LOWER THE BASE ASSEMBLY
ONTO THE SIDE PANEL. (TIGHTEN CAMS)

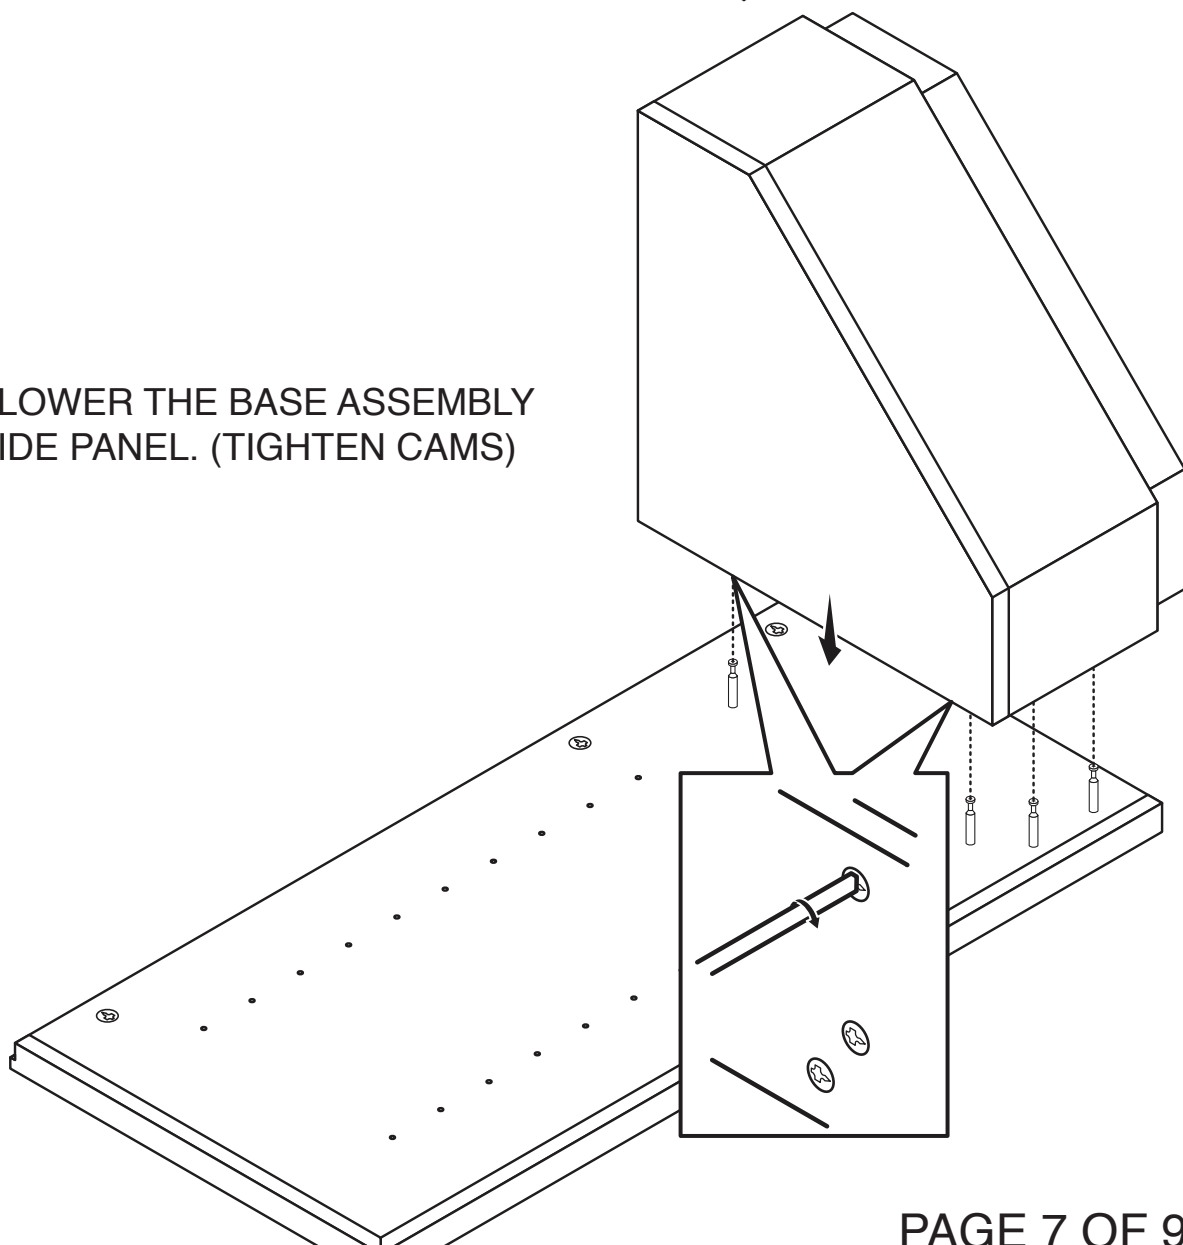


ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER


STEP 12

INSERT CAM LOCK PINS INTO BOTH SIDE PANELS & TIGHTEN CAMS. (USING A MANUAL SCREW DRIVER IS BEST, TO HELP AVOID OVER TIGHTENING.)

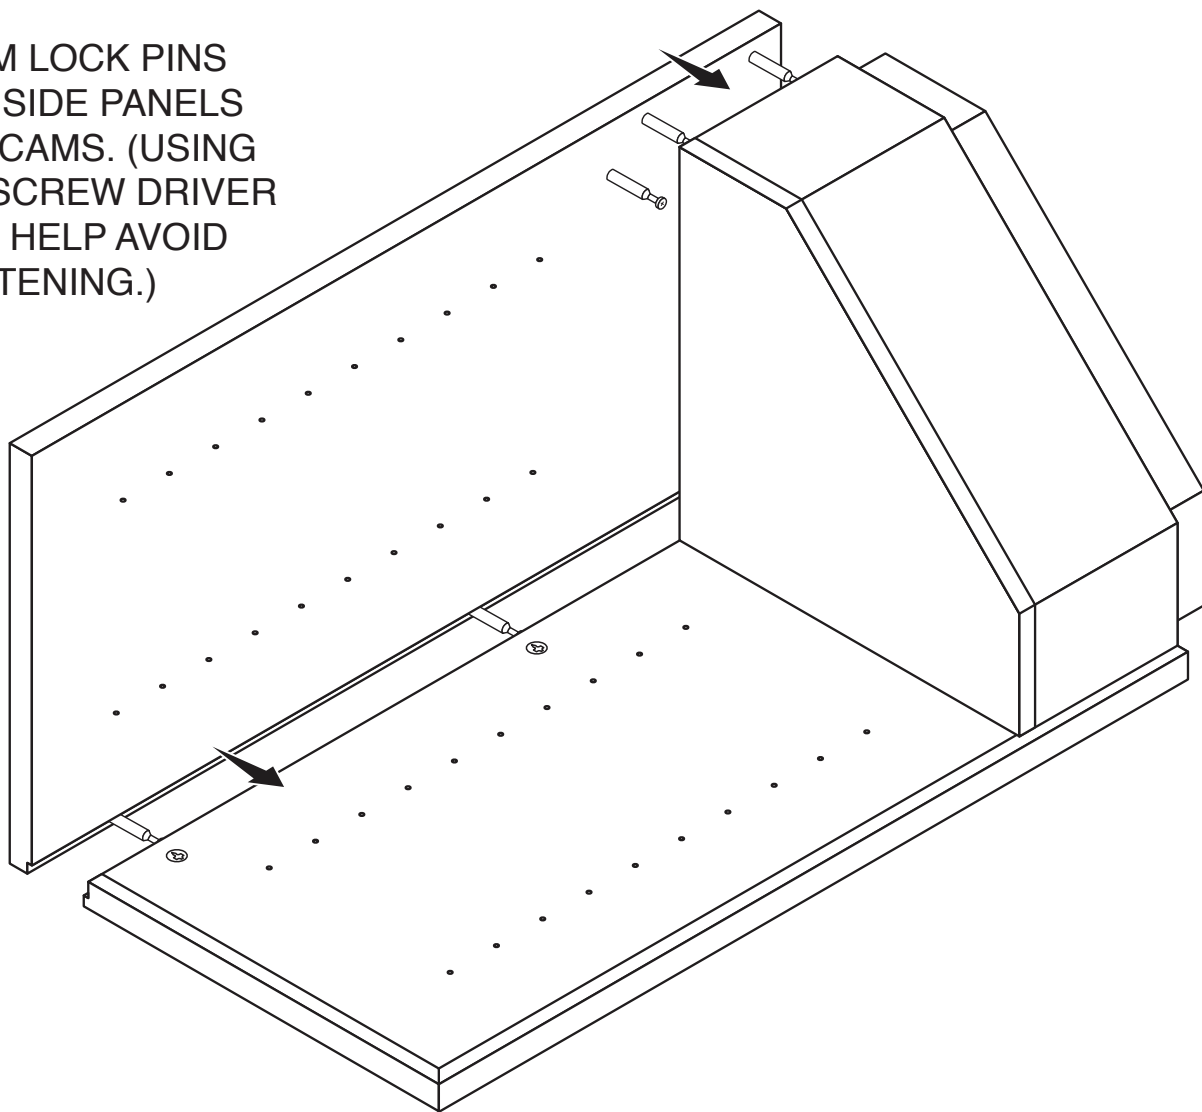

STEP 13

PLACE THE CORNER REINFORCEMENT ONTO THE INNER BASE SUPPORT CORNER, LOCATED ON THE INSIDE OF THE BASE.


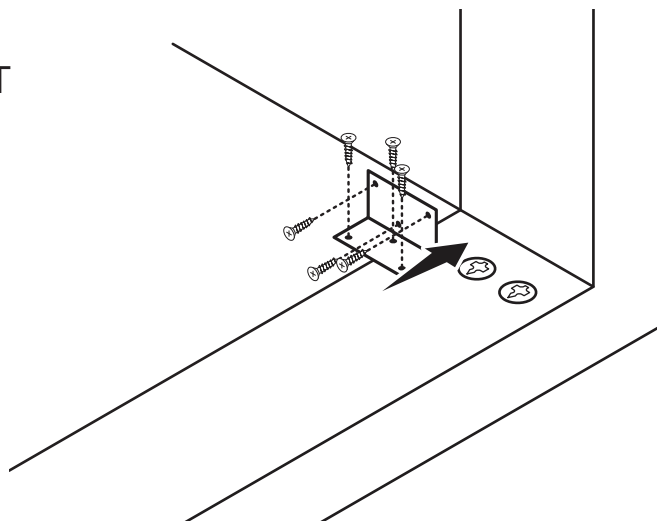


ASSEMBLY INSTRUCTIONS MANUAL

65508 65548 65568 - METAL FRAME CORNER FILLER

STEP 14

ROTATE THE DISPLAY TO AN UPRIGHT POSITION. ON THE BACK EDGE, USING A RUBBER Mallet, CAREFULLY INSERT THE CORNER CAP INTO THE GROOVES.

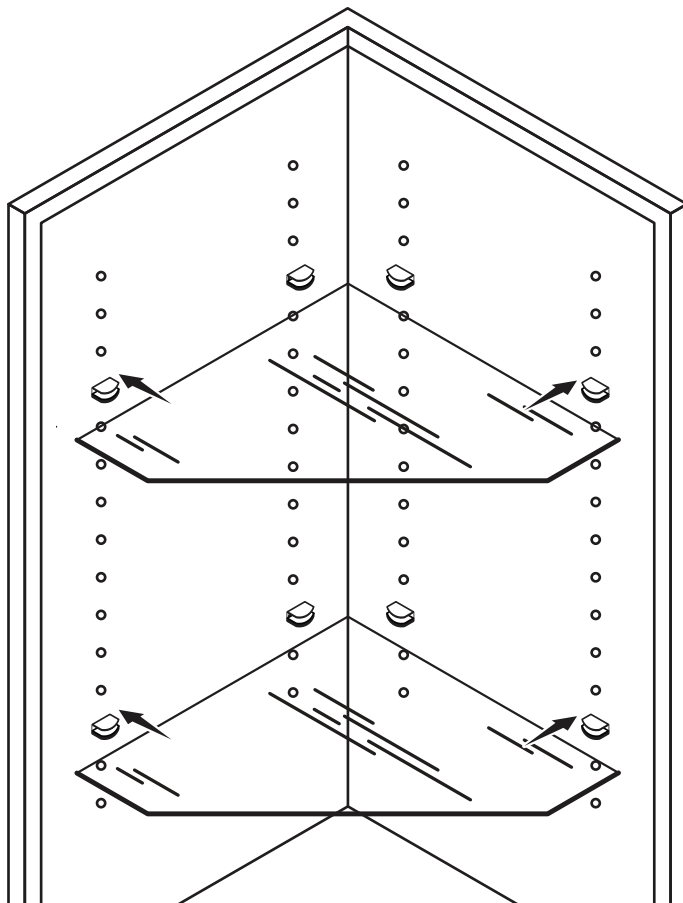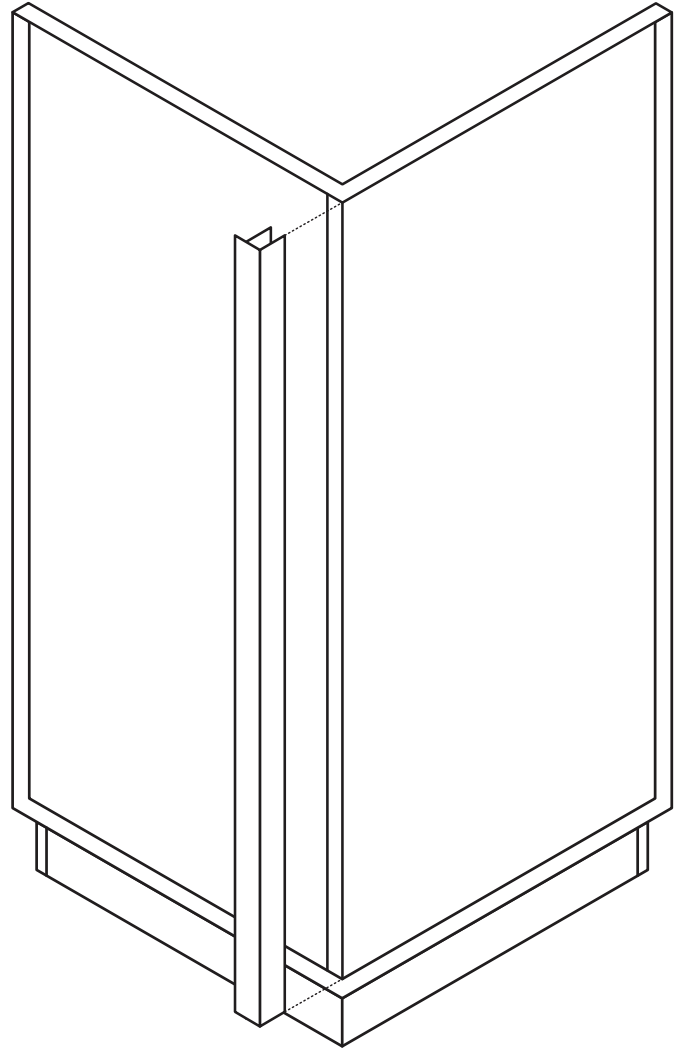

STEP 15

PLACE THE SHELF BRACKETS INTO DESIRED LOCATIONS, THEN SLIDE GLASS SHELVES INTO PLACE.