




INSTALLING SLATWALL PANELS

Panels can be attached to finished or unfinished walls using appropriate screws and, in the case of dry wall, plastic anchors.

A few basic points:


- Level all panels — level bottom panel first.
- Screws should always be through the “slots”, never through the “slats” and should be countersunk (this allows smooth insertion of slatwall fixtures and hardware). Flathead screws work best.
- When panels are attached to wall studs or furring strips, studs/strips should be no less than 16” on center.
- Construction adhesive may be used in addition to screws, to form more secure bond

COUNTERSINK ALL SCREWS TO ENSURE PROPER FIT OF SLATWALL FIXTURES & ACCESSORIES

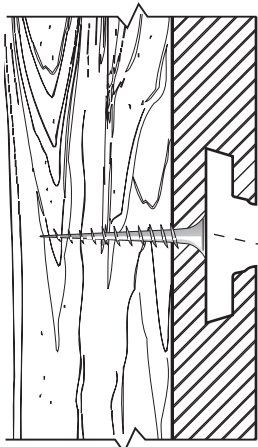


SCREW

WOOD STUD

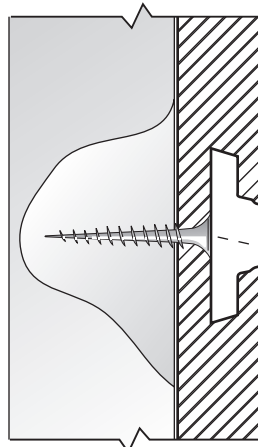


SCREW

METAL STUD

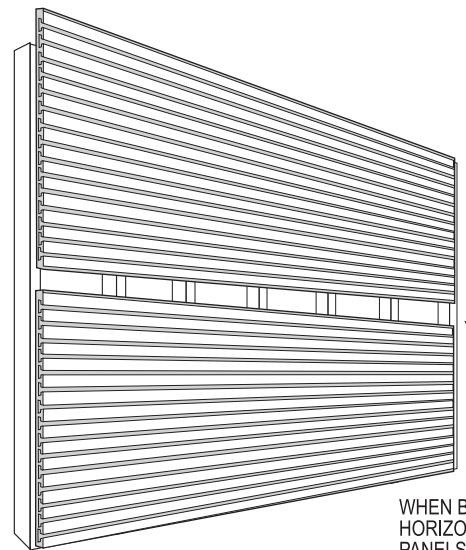


WHEN BUTTING HORIZONTAL PANELS, USE CONSTRUCTION ADHESIVE BEHIND PANELS AT JOINT TO FORM SECURE BOND TO WALL.

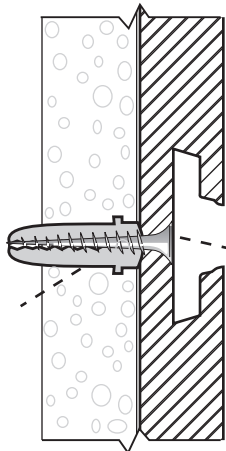

SCREW


PLASTIC ANCHOR

DRY WALL

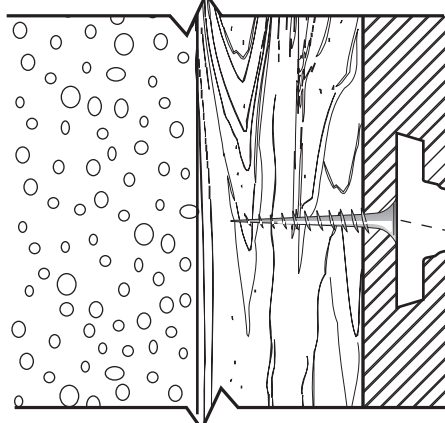

SCREW

MASONRY WALL FURRING STRIP

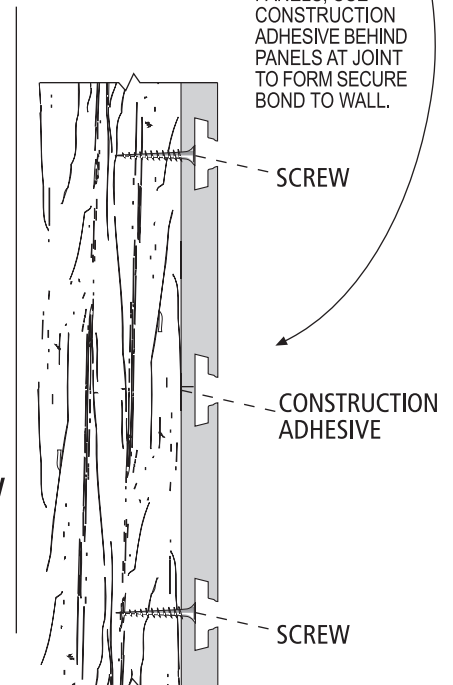

SCREW

CONSTRUCTION ADHESIVE

SCREW

STUD