


ASSEMBLY INSTRUCTIONS MANUAL

#20109 (CHROME) METAL TWIN STEM SIGN HOLDER

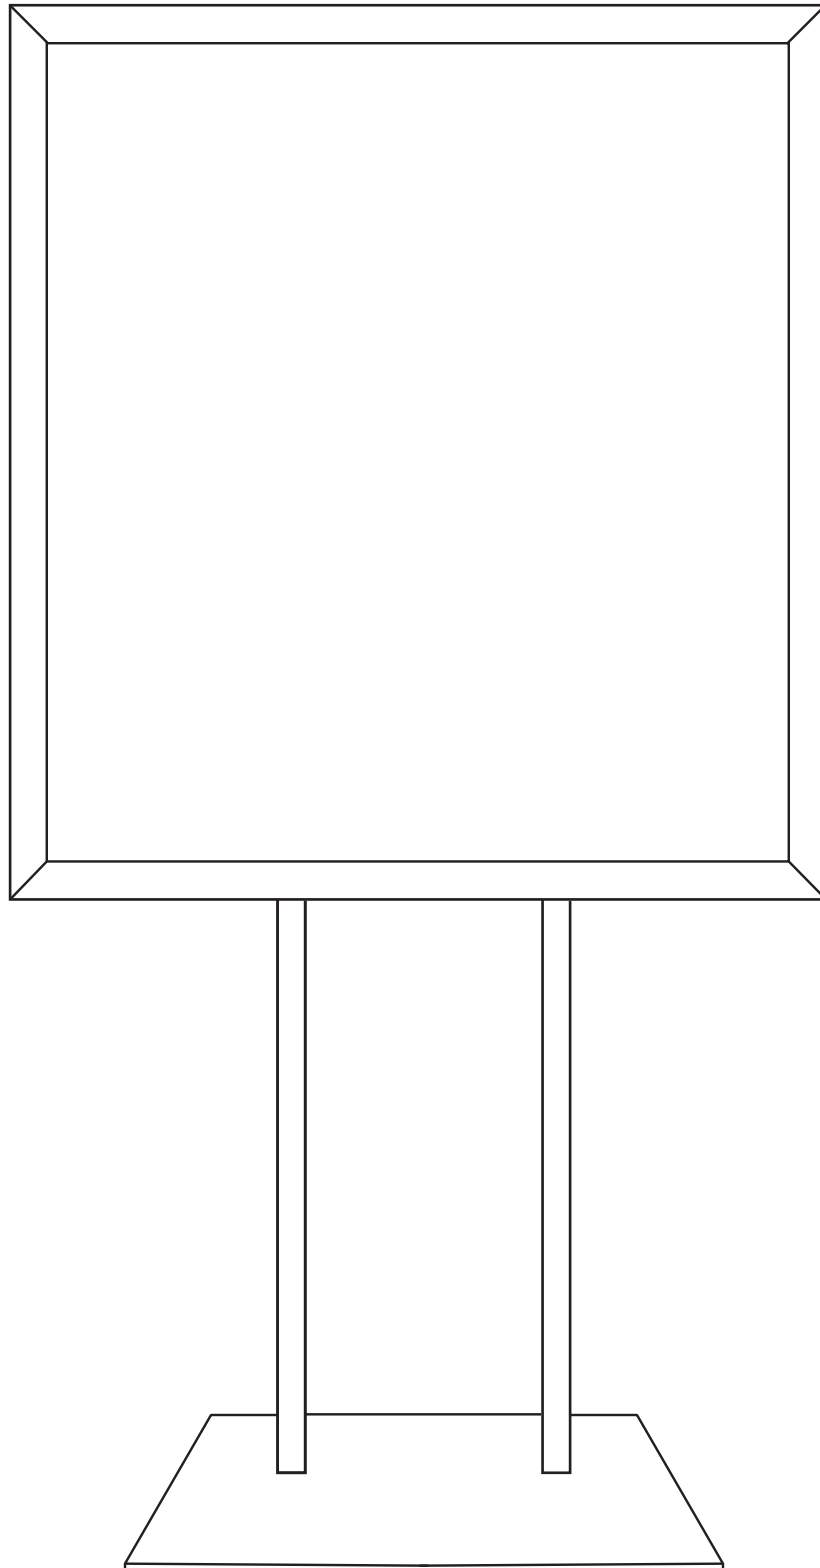


ASSEMBLY INSTRUCTIONS MANUAL

#20109 (CHROME) METAL TWIN STEM SIGN HOLDER


PARTS IN CARTON:

ALLEN WRENCH




ALLEN WRENCH SCREWS
(2 EACH)


STEMS
(2 EACH)

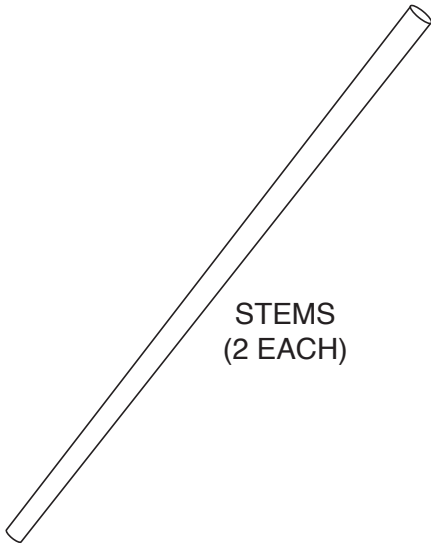

SIGN HOLDER

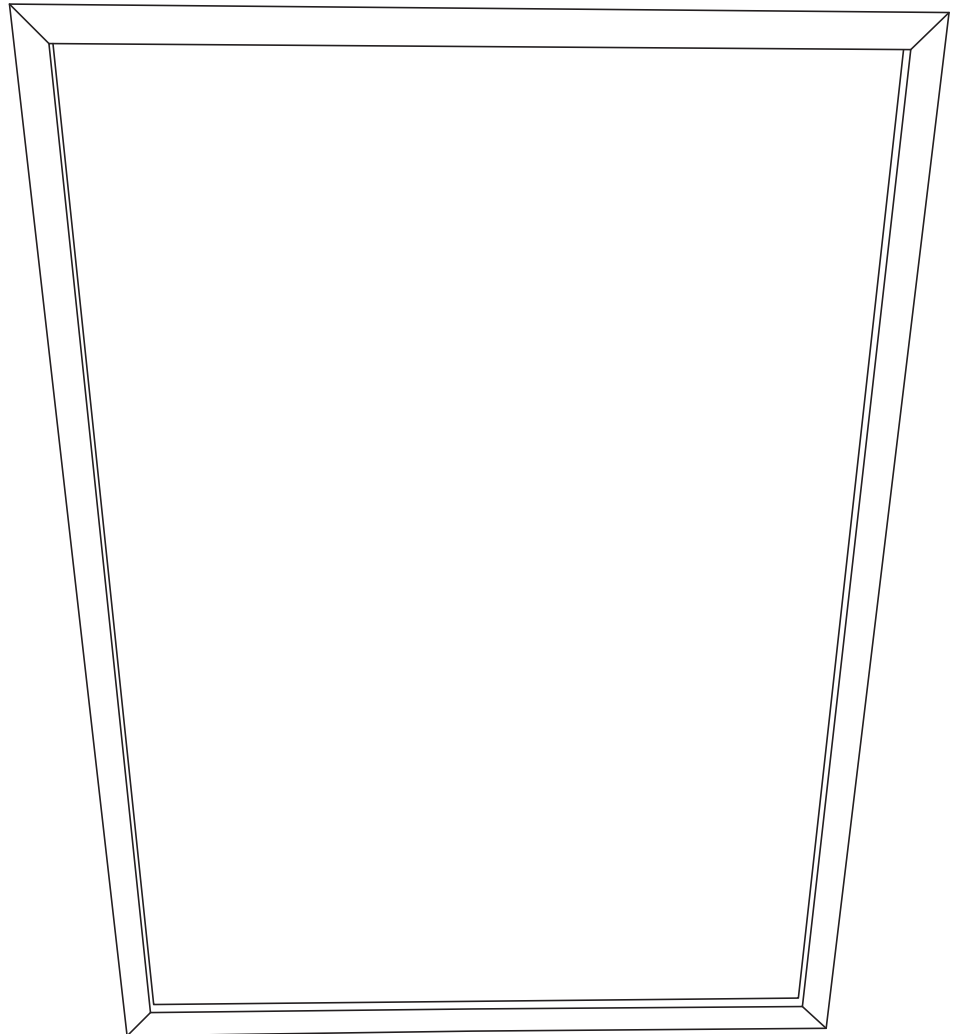

FLOOR BASE

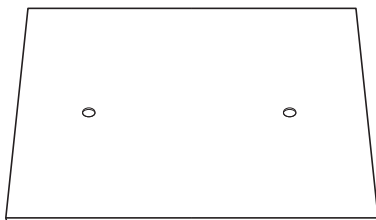


ASSEMBLY INSTRUCTIONS MANUAL

#20109 (CHROME) METAL TWIN STEM SIGN HOLDER

STEP 1

THREAD STEM ONTO SIGN HOLDER (CLOCKWISE) UNTIL TIGHT.
REPEAT FOR OTHER SIDE.

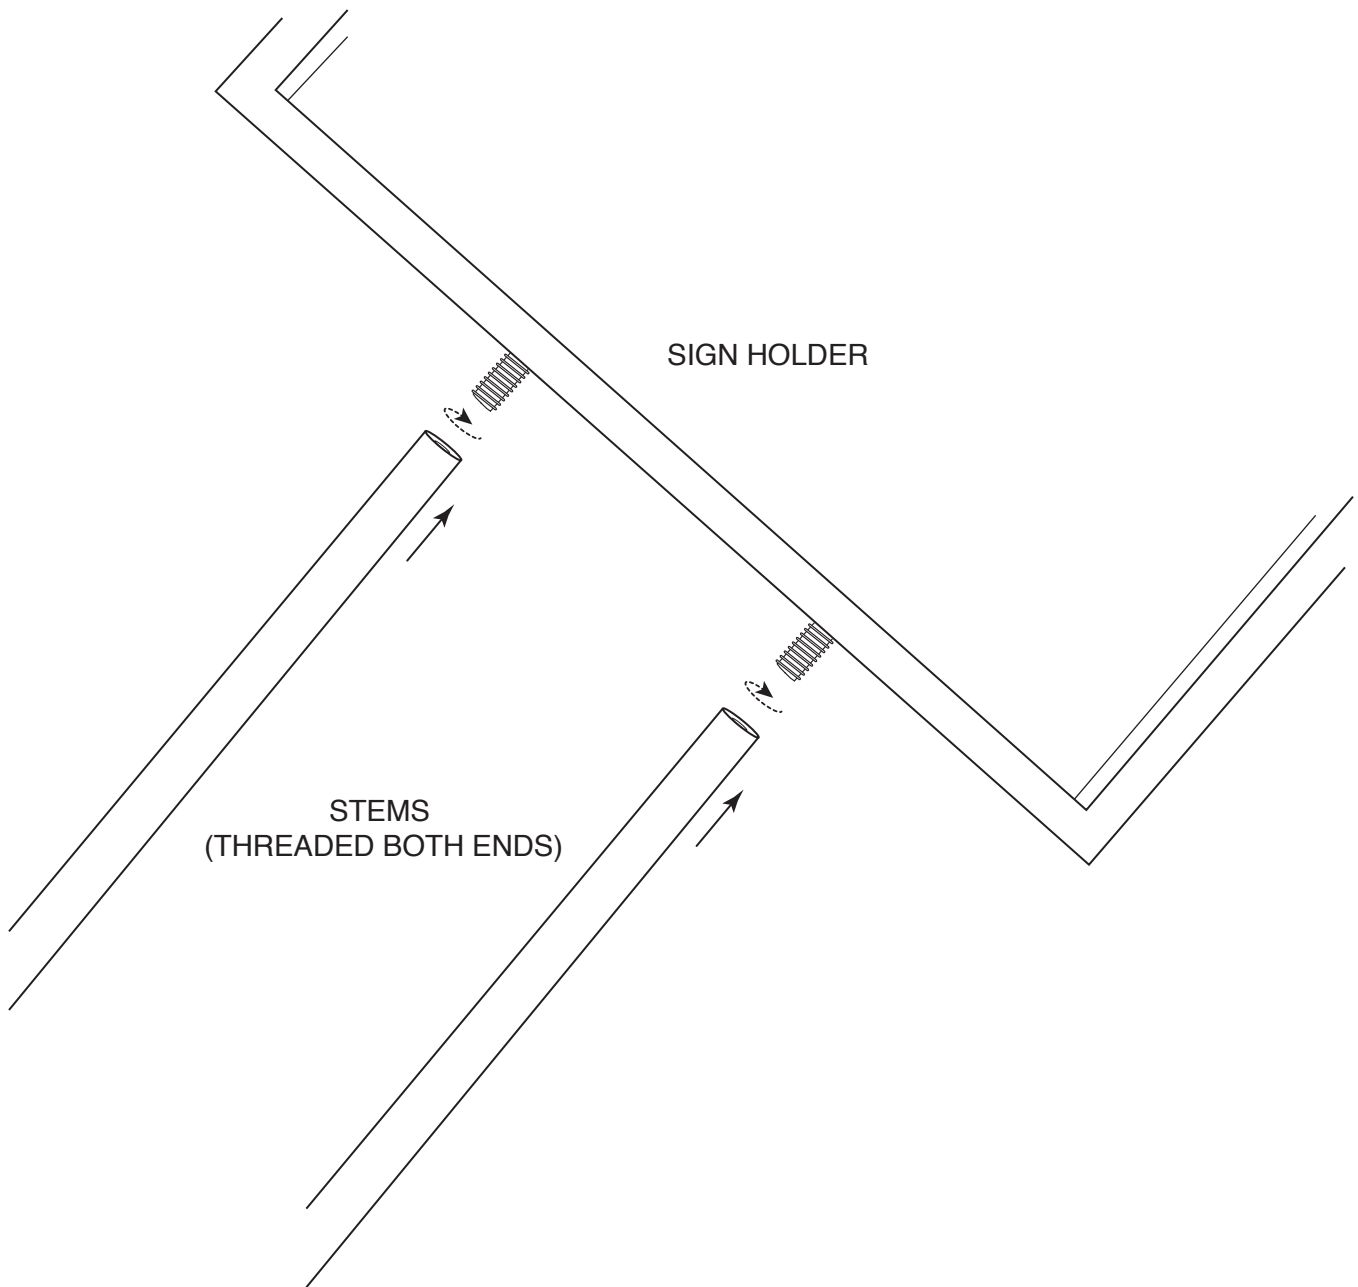

ASSEMBLY INSTRUCTIONS MANUAL

#20109 (CHROME) METAL TWIN STEM SIGN HOLDER

STEP 2

SLIDE ONE ALLEN WRENCH SCREW THROUGH ONE HOLE OF THE FLOOR BASE. ALIGN TO ONE STEM, SCREW INTO STEM UNTIL IT IS SECURE. (TIGHTEN WITH ALLEN WRENCH PROVIDED). REPEAT FOR OTHER SIDE.

THIS COMPLETES THE ASSEMBLY.

