


# ASSEMBLY INSTRUCTIONS MANUAL


#60540 BOUTIQUE CHEVAL FLOOR MIRROR - IVORY

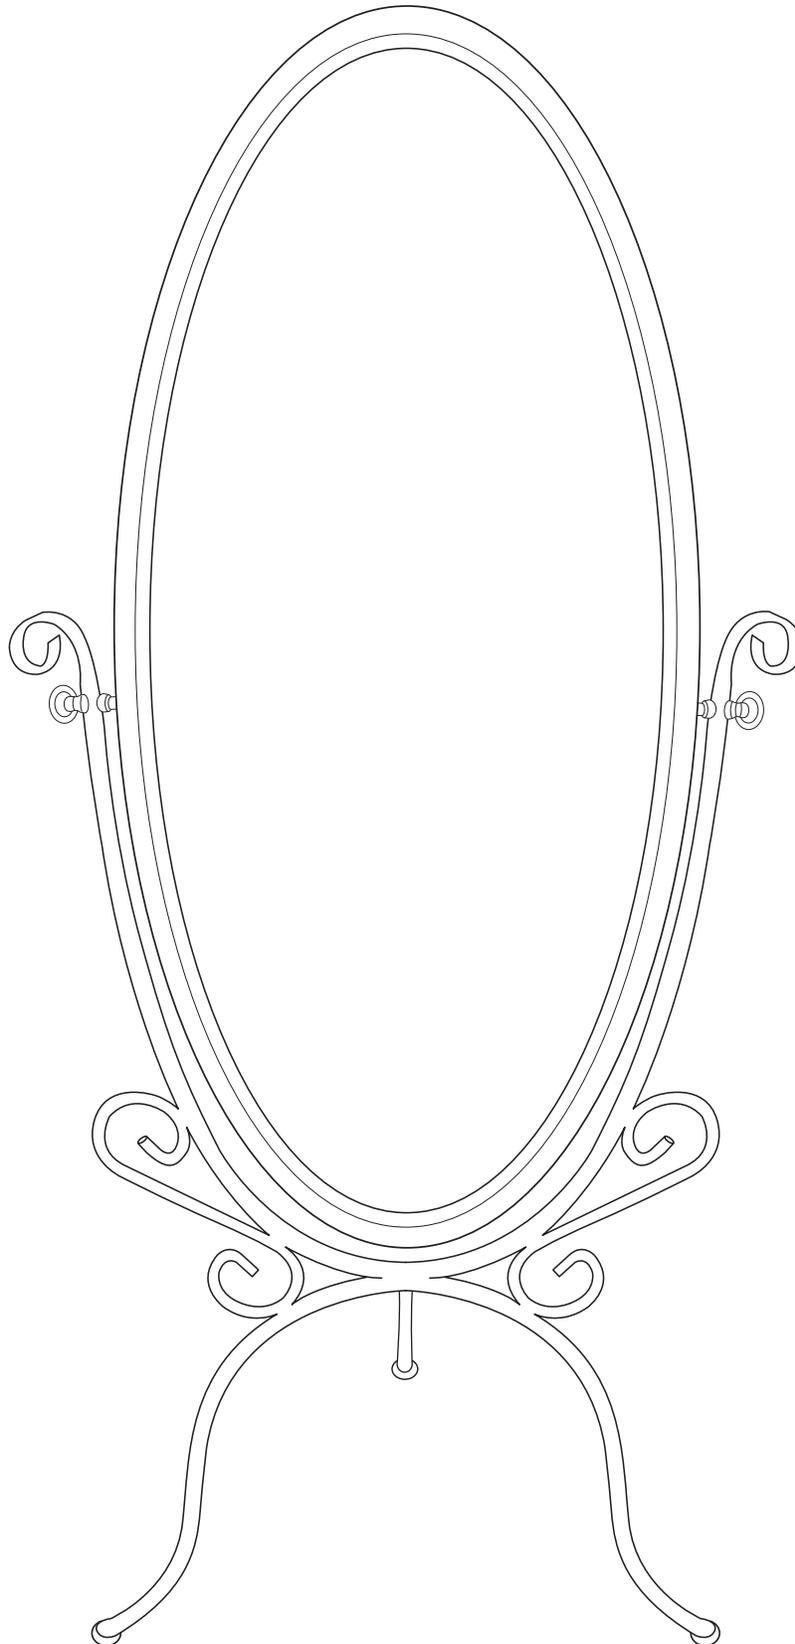


# ASSEMBLY INSTRUCTIONS MANUAL

## #60540 BOUTIQUE CHEVAL FLOOR MIRROR - IVORY


### PARTS IN CARTON:

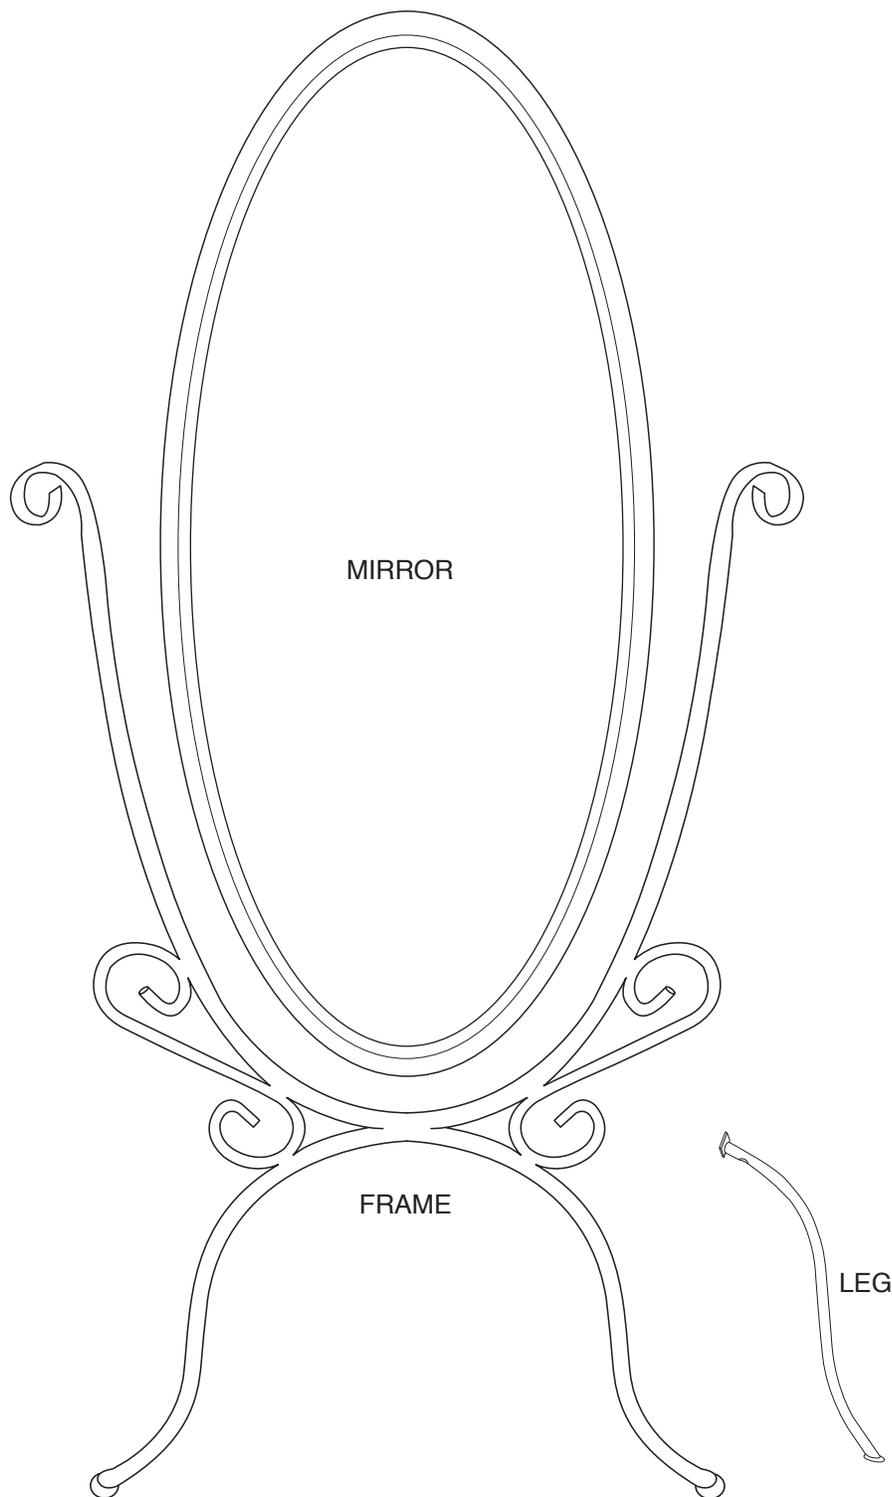

ALLEN WRENCH (SMALL)



HANDLES  
(2 EACH)



LONG MACHINE  
SCREW



SHORT MACHINE  
SCREW  
(2 EACH)



PLASTIC  
SPACERS  
(4 EACH)



REINFORCING  
PIPE  
(2 EACH)

# ASSEMBLY INSTRUCTIONS MANUAL


## #60540 BOUTIQUE CHEVAL FLOOR MIRROR - IVORY

**ASSEMBLY OF THIS PRODUCT - 2 PEOPLE ARE RECOMMENDED**

### STEP 1

PLACE PARTS ON A SOFT CLOTH. INSERT SHORT MACHINE SCREWS (2) THROUGH THE FLANGE THAT IS ATTACHED TO THE LEG AND TIGHTEN INTO FRAME WITH ALLEN WRENCH (PROVIDED).

INSERT LONG MACHINE SCREW (1) THROUGH UNDERSIDE OF LEG AND TIGHTEN INTO FRAME WITH ALLEN WRENCH.

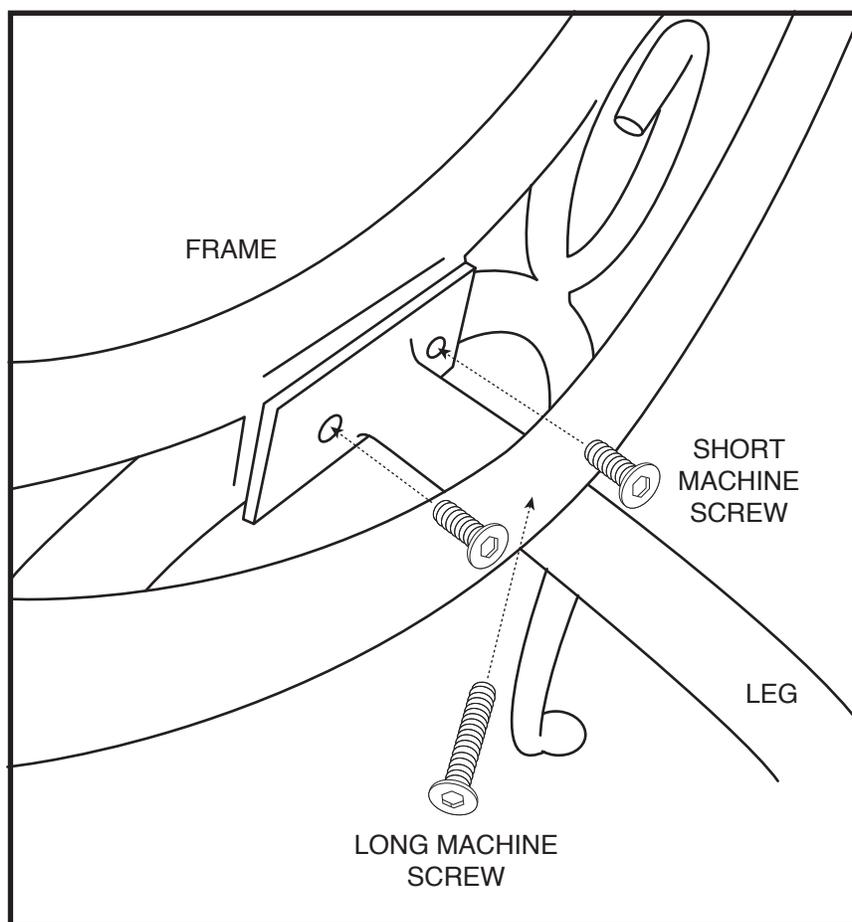

# ASSEMBLY INSTRUCTIONS MANUAL

## #60540 BOUTIQUE CHEVAL FLOOR MIRROR - IVORY

**\*NOTE - MAKE SURE THE RED STICKER WITH ARROW POINTING UP ON THE BACK OF THE MIRROR IS POSITIONED AT THE TOP OF THE MIRROR.**

### STEP 2

INSERT HANDLE (1) THROUGH PLASTIC SPACER (1). THEN THROUGH SIDE OF THE FRAME. THEN THROUGH 2ND PLASTIC SPACER AND REINFORCING PIPE (1). TIGHTEN BY HAND INTO SIDES OF MIRROR. (REPEAT FOR OTHER SIDE)

THIS COMPLETES THE ASSEMBLY.

